


Exportera provmjölkkningsfil från T4C

Steg 1

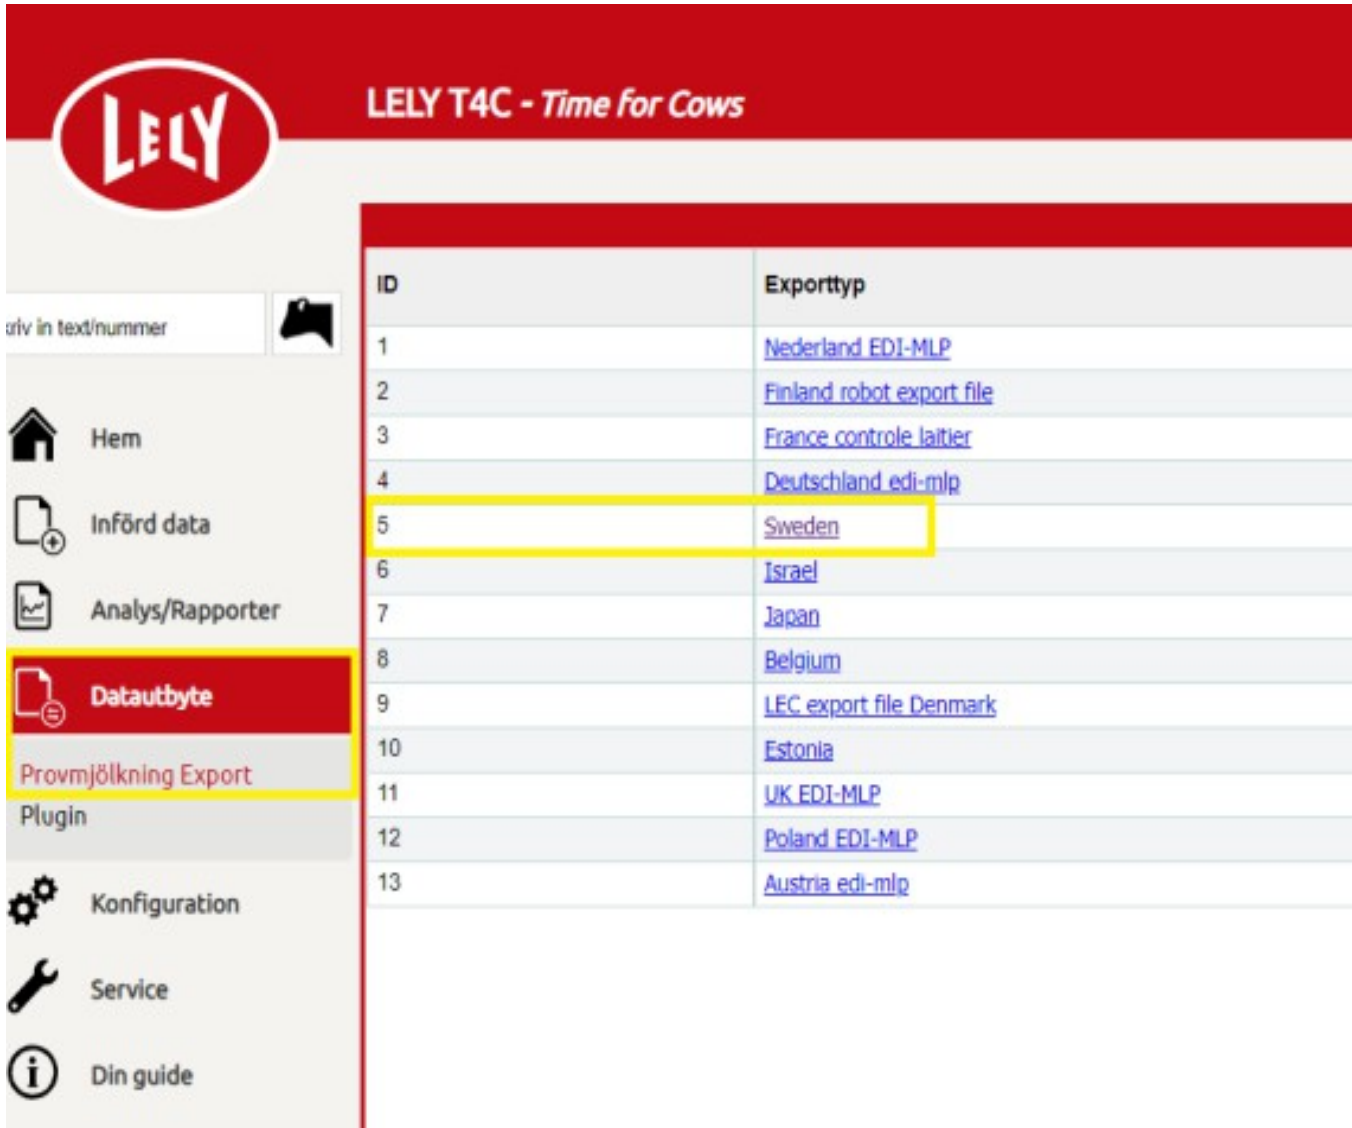


The screenshot shows the LELY T4C web interface. The header is red with the LELY logo and the text "LELY T4C - Time for Cows". On the left, there is a navigation menu with the following items: "Hem", "Införd data", "Analys/Rapporter", "Datautbyte" (highlighted in red), "Provmjölkning Export" (highlighted in yellow), "Plugin", "Konfiguration", "Service", and "Din guide". Below the menu, there is a search bar labeled "Sök i text/nummer" with a magnifying glass icon. The main content area displays a table with two columns: "ID" and "Exporttyp". The table contains 13 rows of data, with the row for ID 5, "Sweden", highlighted in yellow.

ID	Exporttyp
1	Nederland EDI-MLP
2	Finland robot export file
3	France controle laitier
4	Deutschland edi-mlp
5	Sweden
6	Israel
7	Japan
8	Belgium
9	LEC export file Denmark
10	Estonia
11	UK EDI-MLP
12	Poland EDI-MLP
13	Austria edi-mlp


Steg 2








Exportmöjligheter	
Parameter	Värde
Antal dagar	<input type="text" value="10"/>
Lantbrukarens e-post	<input type="text"/>
Mjölkföretagets e-post	<input type="text"/>

Steg 3




LELY T4C - Time for Cows

skriv in text/nummer 


-  Hem
-  Införd data
-  Analys/Rapporter
-  **Datautbyte**
- Provmjolkning Export Plugin
-  Konfiguration
-  Service
-  Din guide

Exportmöjligheter


Parameter	
Antal dagar	10
Lantbrukarens e-post	<input type="text"/>
Mjölkföretagets e-post	<input type="text"/>

 edi-mlp (3).dat ^

Steg 4



LELY T4C - Time for Cows

kriv in text/nummer 

- Hem
- Införd data
- Analys/Rapporter
- Datautbyte**
- Provmjolkning Export Plugin
- Konfiguration
- Service
- Din guide


Exportmöjligheter

Parameter
Antal dagar
Lantbrukarens e-post
Mjölkföretagets e-post

edi-mlp (3).dat

- Öppna
- Öppna alltid filer av denna typ
- Visa i mapp
- Avbryt


Steg 5

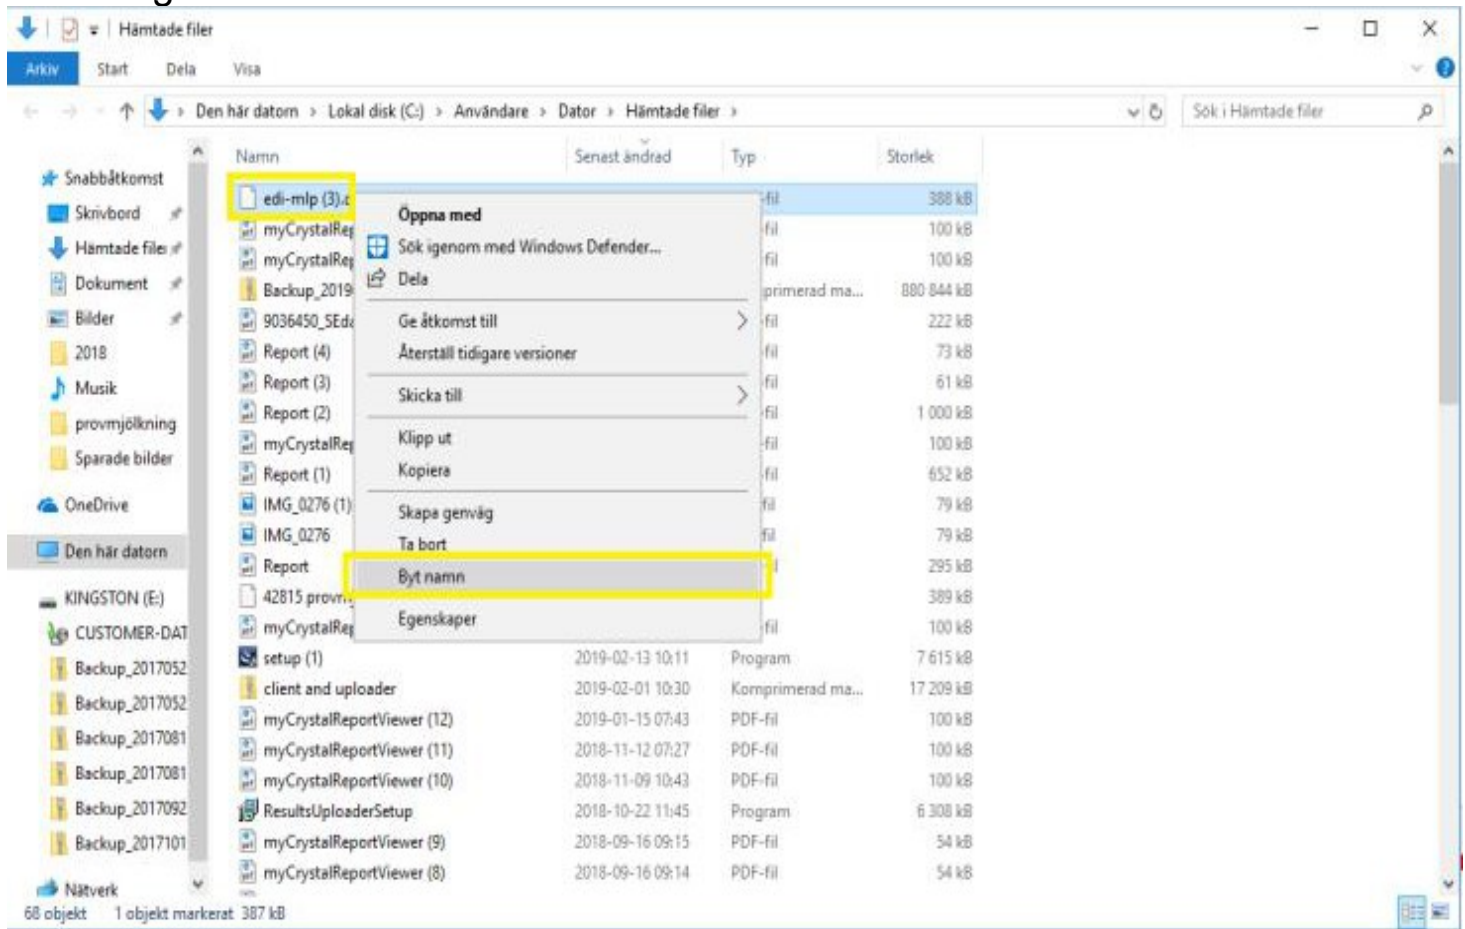

Windows File Explorer window showing a file named "edi-mlp (3)". The context menu is open, and the "Byt namn" option is highlighted in yellow.

Namn	Senast ändrad	Typ	Storlek
edi-mlp (3)		fil	388 kB
myCrystalReg		fil	100 kB
myCrystalReg		fil	100 kB
Backup_2019		primerad ma...	880 844 kB
9036450_5Ed		fil	222 kB
Report (4)		fil	73 kB
Report (3)		fil	61 kB
Report (2)		fil	1 000 kB
myCrystalReg		fil	100 kB
Report (1)		fil	652 kB
IMG_0276 (1)		fil	79 kB
IMG_0276		fil	79 kB
Report		fil	295 kB
42815 provm...		fil	389 kB
myCrystalReg		fil	100 kB
setup (1)	2019-02-13 10:11	Program	7 615 kB
client and uploader	2019-02-01 10:30	Komprimerad ma...	17 209 kB
myCrystalReportViewer (12)	2019-01-15 07:43	PDF-fil	100 kB
myCrystalReportViewer (11)	2018-11-12 07:27	PDF-fil	100 kB
myCrystalReportViewer (10)	2018-11-09 10:43	PDF-fil	100 kB
ResultsUploaderSetup	2018-10-22 11:45	Program	6 308 kB
myCrystalReportViewer (9)	2018-09-16 09:15	PDF-fil	54 kB
myCrystalReportViewer (8)	2018-09-16 09:14	PDF-fil	54 kB

Steg 6

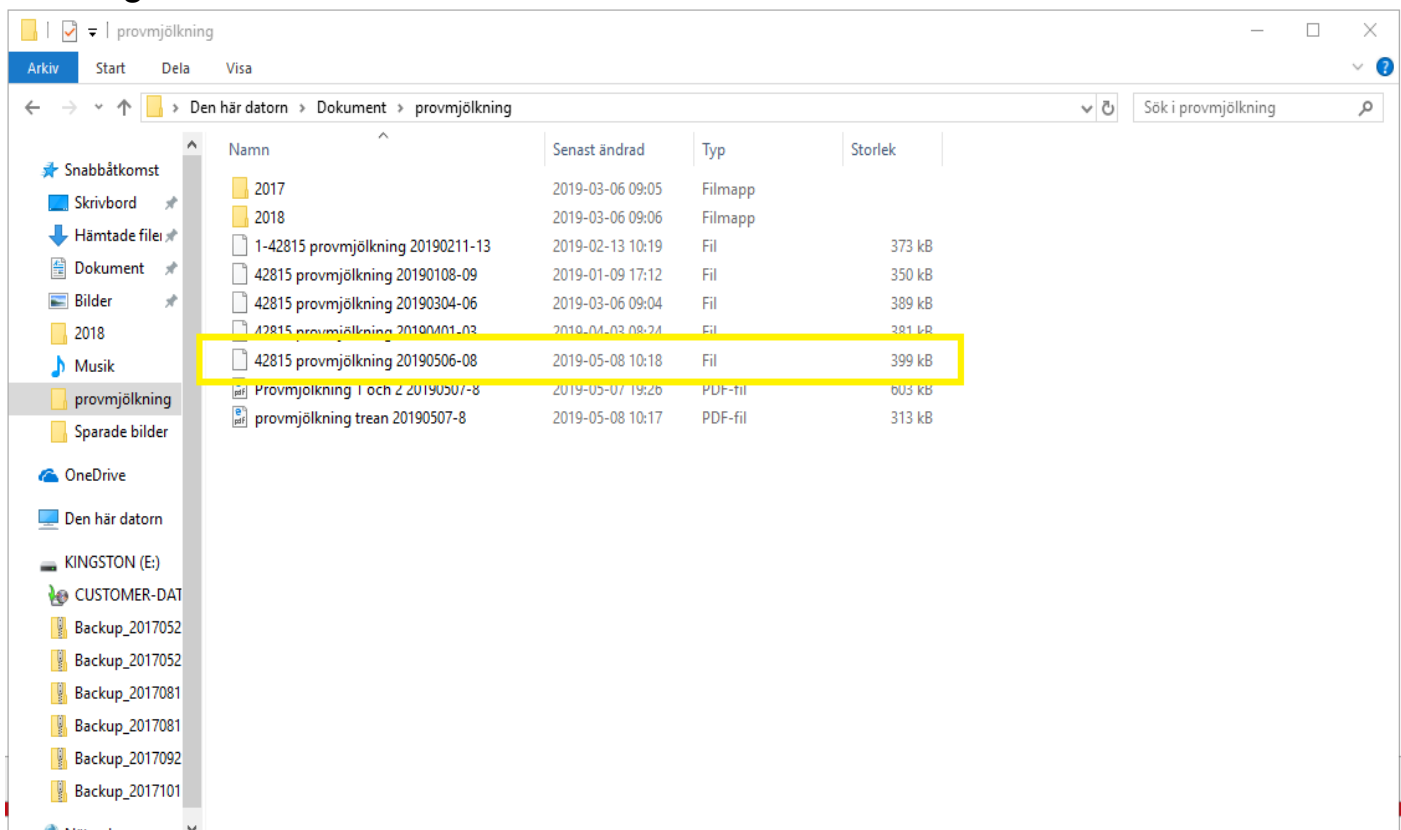

Windows File Explorer window showing a folder named "provmjolkning". The file "42815 provmjolkning 20190506-08" is highlighted in yellow.

Namn	Senast ändrad	Typ	Storlek
2017	2019-03-06 09:05	Filmapp	
2018	2019-03-06 09:06	Filmapp	
1-42815 provmjolkning 20190211-13	2019-02-13 10:19	Fil	373 kB
42815 provmjolkning 20190108-09	2019-01-09 17:12	Fil	350 kB
42815 provmjolkning 20190304-06	2019-03-06 09:04	Fil	389 kB
42815 provmjolkning 20190401-03	2019-04-03 08:24	Fil	381 kB
42815 provmjolkning 20190506-08	2019-05-08 10:18	Fil	399 kB
Provmjolkning 1 och 2 20190507-8	2019-05-07 19:26	PDF-fil	603 kB
provmjolkning trean 20190507-8	2019-05-08 10:17	PDF-fil	313 kB